


## **How To Apply CAD Layers To A Floor Plan**

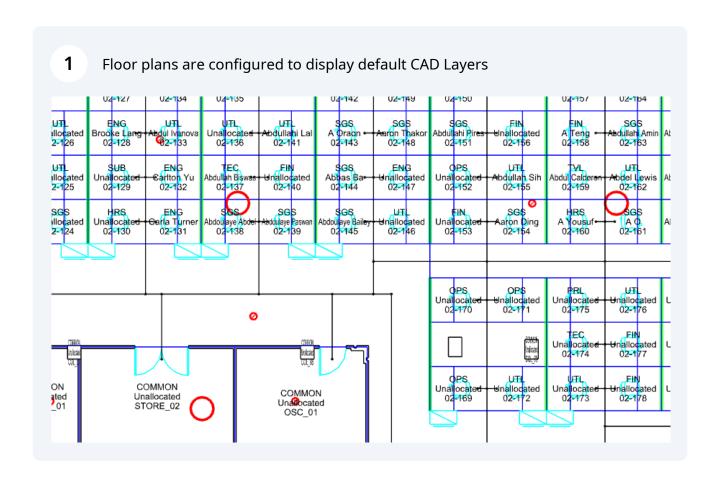

To change CAD layers, click "Layers".

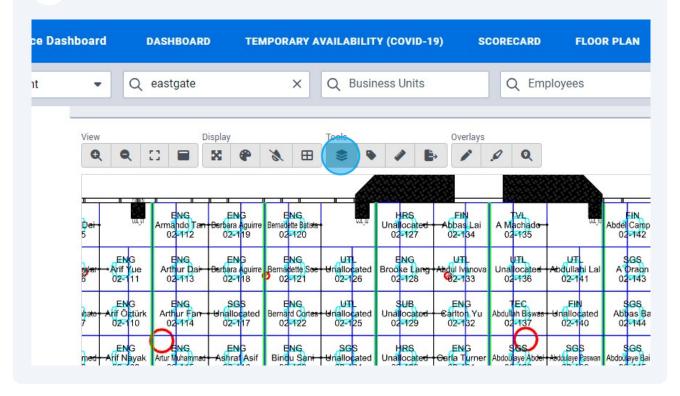

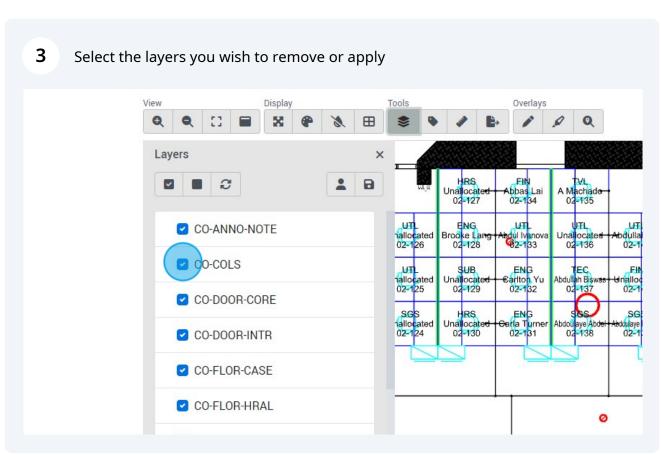

The floor plan now displays the selected layers.

View

Display

Tools

Overlays

Layers

Layers

CO-ANNO-NOTE

Display

Tools


Overlays

Display

Displ

Unallocated STORE\_02 Ø

COMMON Unabcated OSC\_01

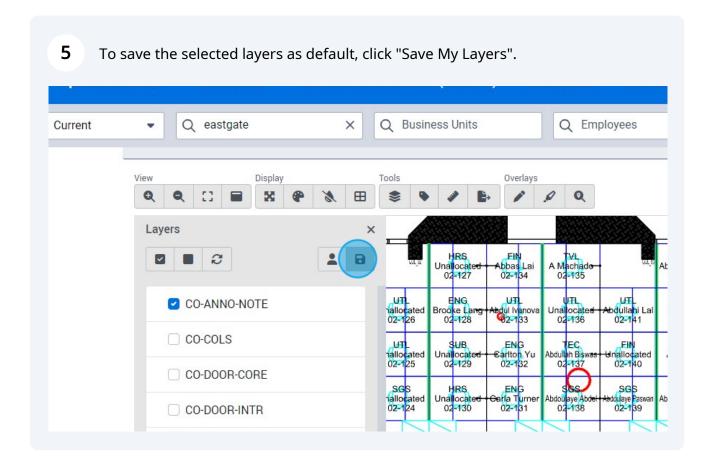


CO-FLOR-HRAL

CO-FLOR-PFIXCO-FLOR-STRS

✓ CO-FLOR-TPTN

✓ CO-WALL-CORE

**6** To reset your layers to the default, click "Reset Layers".

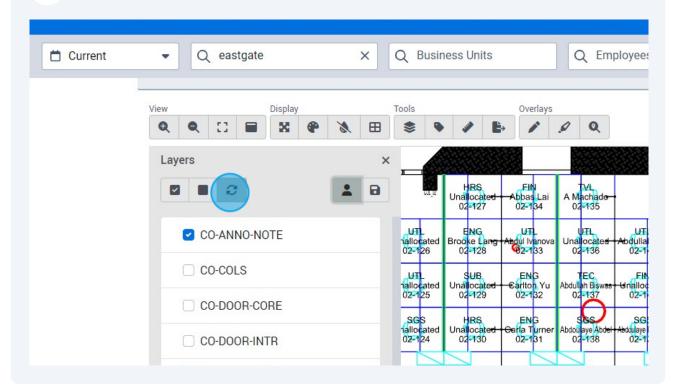

7 To return to your saved layers, click "Reset My Layers". View Display Overlays Tools 23 Q Q  $\blacksquare$ Layers FIN bbas Lai 02-134 HRS A Machade 02-135 8 ~ C Unallocate 02-127 UT UT ENG UTL UTL CO-ANNO-NOTE nallocated 02-126 Brooke La 02-128 dullan 02-14 dul Ivanov 2-133 Unallocate 02-136 CO-COLS TEC Abdullah Bisy 02-137 ENG arlton Yu 02-132 FIN nalloca 02-140 UT SUB nallocated 02-125 Unallocate 02-129 CO-DOOR-CORE ENG arla Turner 02-131 SGS HRS SGS Unallocate 02-130 nallocated 02-124 Abdou aye Ab 02-138 doulaye Pa 02-139 CO-DOOR-INTR